

Fig.

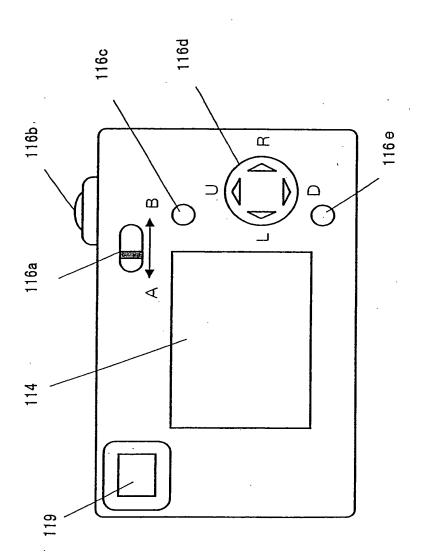


Fig. 3

Fig. 4


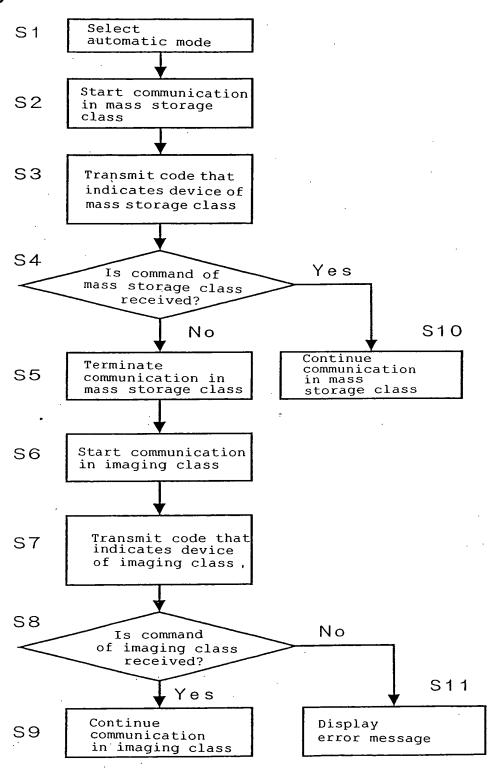


Fig. 5 (a)	Fig. 5 (b)	Fig. 5 (c)
Please set up communication mode of USB. Mass storage class Imaging class Automatic mode	Checking communication mode of connection destination.	Communication started in mass storage class.
Fig. 5 (d)	Fig. 5 (e)	
Communication started in imaging class.	Error! No communication established in mass storage class and imaging class	

Fig.6

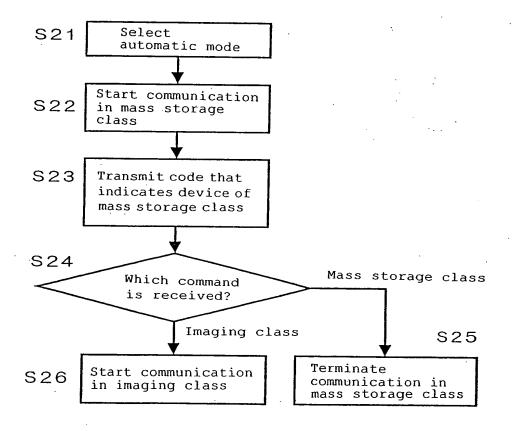

Supports mass storage class only Supports both of mass storage class and imaging class Supports imaging class only Printer B Printer A Personal computer 720 730 740 750b 750a Digital camera

200

Fig.8

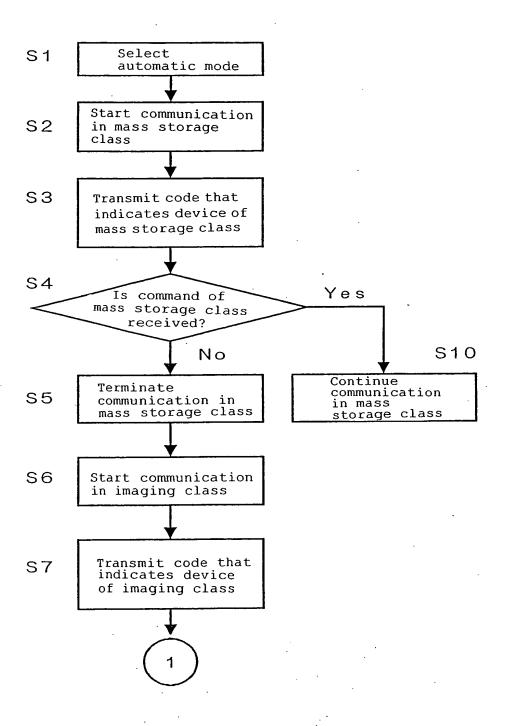


Fig.9

